


RESETTING TEMPERATURES ON THE E-Z FLOW GEN IV FOAM-IN-PLACE SYSTEM

These instructions are intended for Management only. In order to prevent tampering with the equipment by unauthorized personnel, please keep these instructions in a safe place.

Your E-Z Flow GEN IV system is preset for temperatures of 135 degrees F on the “A” side, and 155 degrees F on the “B” side. If it is desired to change temperatures, the following procedure can be used. Please note that the temperatures cannot be set lower than 80° F or higher than 170° F.

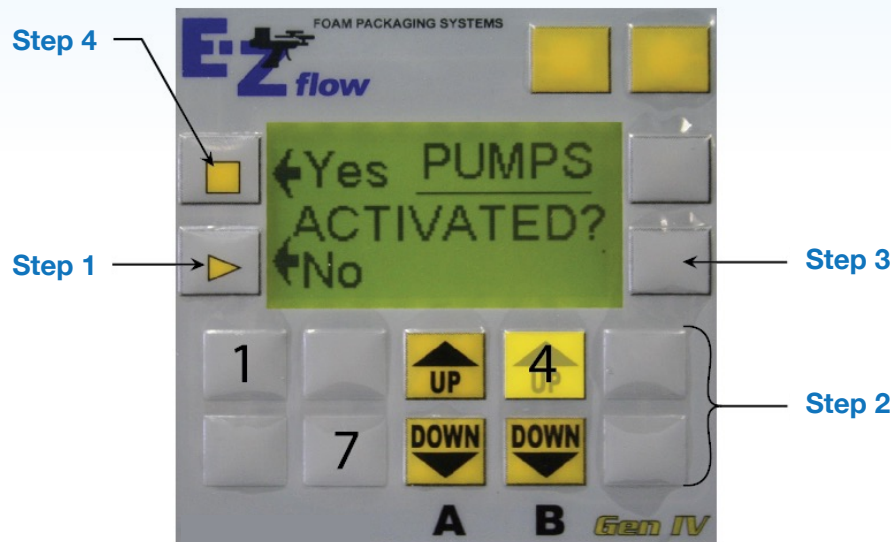

Step 1: Press ► button (to lower left of display). You will see “Enable SP” and an area to enter numbers.

Step 2: Under the display, there are two rows of buttons, five per row, including the “UP” and “DOWN” buttons on each side. The top five buttons represent the numbers 1 through 5 from left to right, and the bottom five buttons represent the numbers 6 to 0 from left to right. Using these numbers, enter the number “4711” (“4” is the B UP button; 7 is the button just to the left of the A DOWN button, and “1” is the second button to the left of the A UP button.)

Step 3: Press the button on the lower right of the display. This button is not marked.

Step 4: Press the ■ button (upper left of display). This will return you to the main menu.

Now you will see the numbers representing the temperature set points and actual temperatures. If you followed the above procedure, you now have one minute to change the temperature settings, using the UP and DOWN buttons on the A and B side. Again, the temperatures cannot be set lower than 80° F or higher than 170° F.

After one minute or so, the temperature setting function will again be locked out, and you will have to repeat the steps above. This is to ensure that no unauthorized changes can be made to the settings.